

Mounting instructions



**SPEAKER
LIGHT
KITS . DE**

Speaker lighting **Rotation**

System: Spike 2 Pro / Premium

- Aerosmith
- Batman 66
- Guardians of the Galaxy
- Star Wars
- Iron Maiden
- Deadpool
- Black Knight
- Elvira
- TMNT
- Jurassic Park
- Stranger Things
- Beatles
- Munsters
- The Avengers Infinity Quest
- Led Zeppelin
- Mandalorien
- Godzilla
- Rush

Note in advance:

The SpeakerLightKit Rotation System works with a 5V power supply.

It is powered by the 12 V power supply of the pinball machine.

It should only be connected as described in this manual in order not to cause damage to the device or the lighting system.

Even if working with a low voltage, it is recommended to unplug the pinball machine before opening and mounting.

Assembly:

Open the backbox and fold down the cover.

It is recommended to place a soft object between the bezel and the disc to take the pressure off the bezel and avoid scratches on the siderails.

 
Unscrew the speaker.

Mount the SpeakerLightKit on the bracket where the speaker was sitting before. The opening with the cables must point diagonally towards the DMD.


Mount the speaker on the SpeakerLightKit.

The right and left speaker are identical in the mounting.

Translated with www.DeepL.com/Translator (free version)

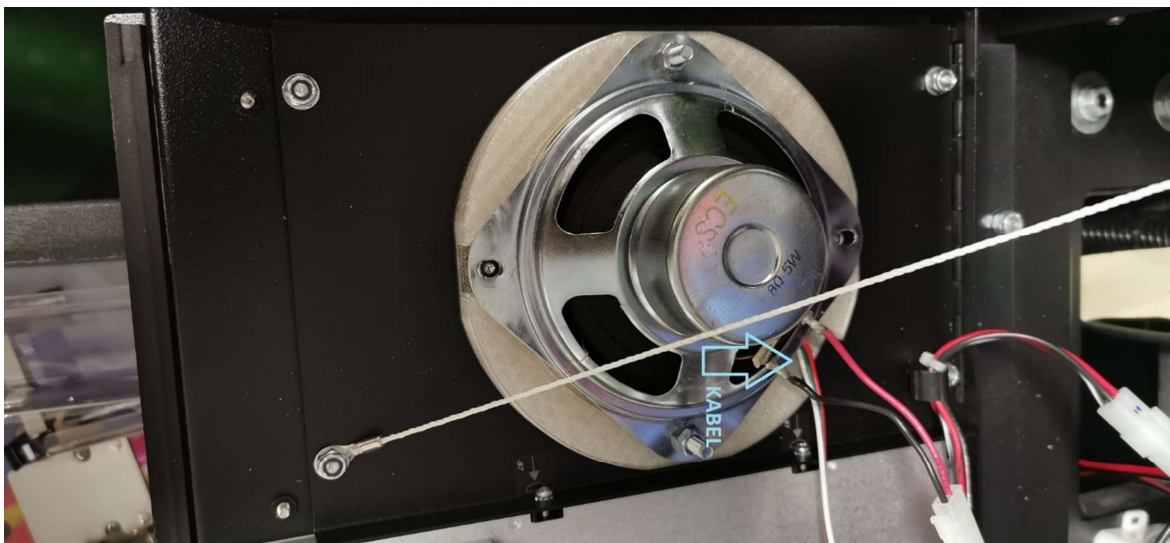

 Connect the controller board to the SpeakerLightKit via the 3-pin connector and connect the system to the Pinball.

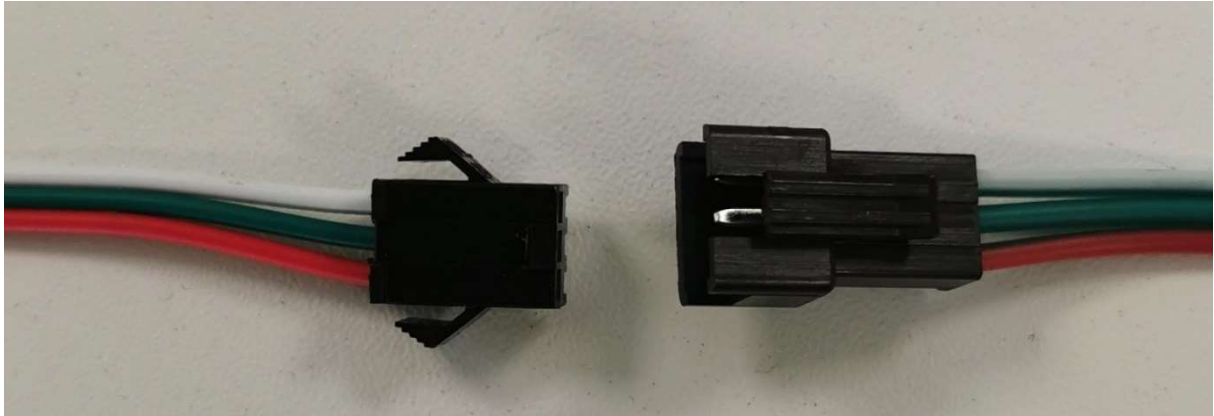

When mounting the connector on the board, make sure that + and - are not interchanged.

(+) = red cable

(-) = black cable



Place the voltage transformer (small black box) in the backbox and close the cover.

Reconnect the power plug and start the system.

The remote control can be used to set the colors fixed or select an effect.

We wish you a lot of fun with the rotation set from SpeakerLightKits.de