

2005 Mazda MX-5 Miata

2005 ACCESSORIES & EQUIPMENT Seats - MX-5 Miata

2005 ACCESSORIES & EQUIPMENT

Seats - MX-5 Miata

SEAT REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Disconnect the buckle switch connector.
3. Remove in the bolts, then remove the seat.

2005 Mazda MX-5 Miata

2005 ACCESSORIES & EQUIPMENT Seats - MX-5 Miata


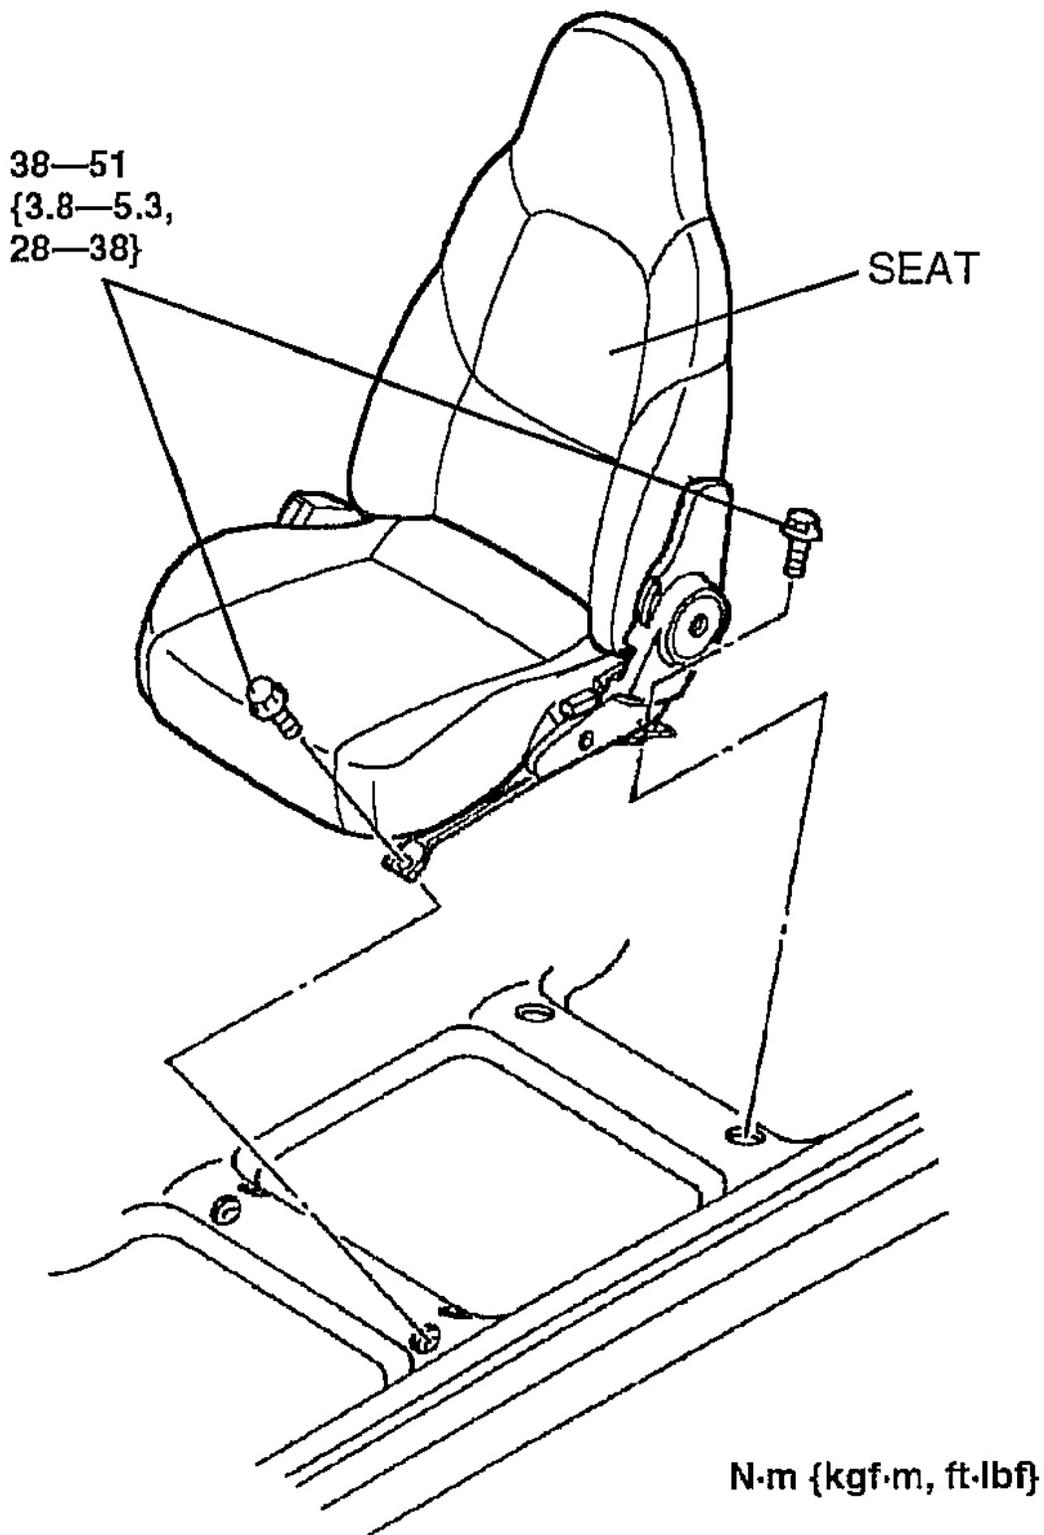


Fig. 1: Removing Seat - With Torque Specifications
 Courtesy of MAZDA MOTORS CORP.

4. Install in the reverse order of removal.

SEAT DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.

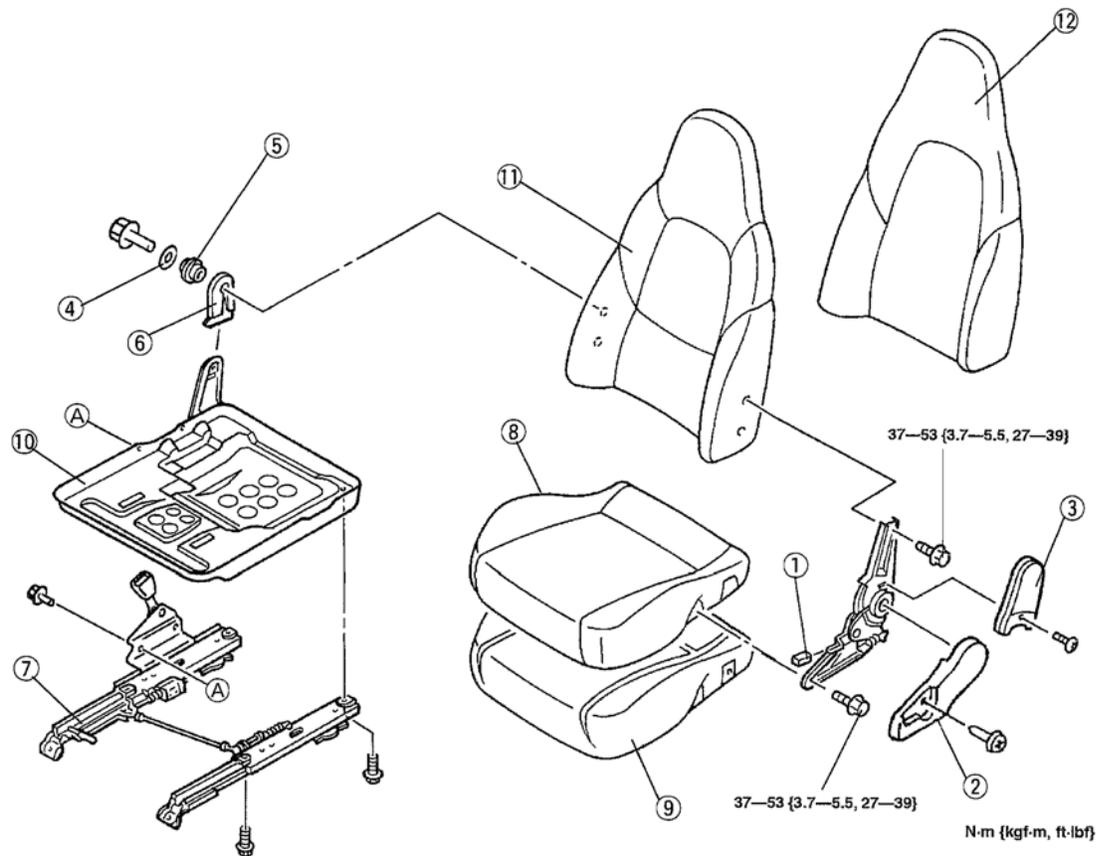

1	Recliner lever
2	Recliner knuckle cover (See Reclining Knuckle Cover Removal Note)
3	Recliner knuckle
4	Silencer
5	Bushing

6	Hinge cover
7	Slide adjuster
8	Seat cushion trim
9	Seat cushion pad
10	Seat cushion frame
11	Seat back trim
12	Seat back pad and frame


G03638755

Fig. 2: Disassembling Seat - With Torque Specifications
 Courtesy of MAZDA MOTORS CORP.

2. Assemble in the reverse order of disassembly.

RECLINING KNUCKLE COVER REMOVAL NOTE

1. Remove the screws.
2. Lift the reclining knuckle cover in the arrow direction to remove the hook.

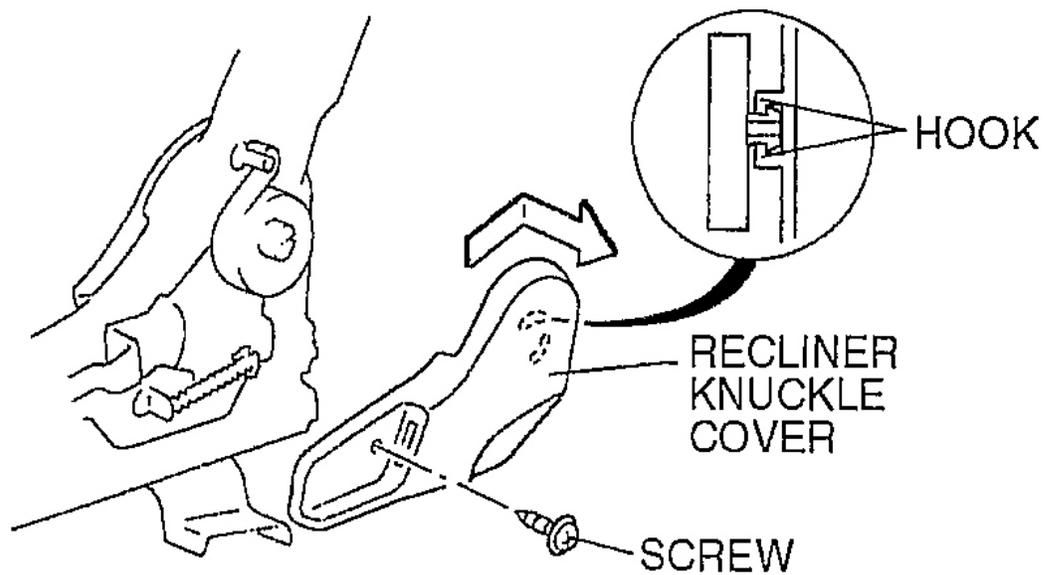

G03638756

Fig. 3: Removing Reclining Knuckle Cover
Courtesy of MAZDA MOTORS CORP.