

Reg no: 2017/362363/07 SA Vat No: 4700280045 Tax no: 9658182176 Import/Export Reg No: 21798845

Operating and maintenance Instructions for Quick Pitch Weather Shade 270 (2.4m & 2.0m) & Quick Pitch Weather Shade 180



How to Open

- 1) Open Zipper of the bag, one zip to the front and other one to the back. Open the zipper to the maximum on both ends. (See green dots)
- 2) Unstrap the 3 x black Velcro straps holding the weather shade in place. (See yellow rectangles)
- 3) Release the folded canvas from the awning pan.
- 4) Pull open the arms on LHS pull the arms to the right, RHS pull arms to the left, from the pan. (See red lines)
- 5) Mount the short yellow tension strap to tensioning point. (See white arrow)

- 6) Use the yellow tie down straps that is tucked neatly in each arm to fix the awning to the ground if needed. (See light blue dots)
- 7) Tent pegs situated in the awning pan fitted with velcro fitted next to stainless steel hinge.
- 8) Tension the awning to ensure effective water dispersion from the awning (only when used in rain) (See pink star)

How to Close

- 1) If yellow tension straps were used to fix awning to the ground, take out tent pegs and put straps back into the arms and place the tent pegs back into the tent peg bag.
- 2) Release the tension straps.
- 3) Start by folding back the arms by holding the tension strap and walking back to the pan.
 - a. Do not pinch the canvas underneath the arms as this will result in potential tearing on the awning.
- 4) Push all the arms into the pan.
- 5) Fold/roll the canvas upwards tightly to fit in the pan before strapping back the black Velcro straps.
- 6) Ensure the canvas is spread evenly inside the pan to avoid bulging of the canvas.
- 7) Make sure the canvas is tightened using the Velcro strapping inside the pan.
- 8) Retain both zips toward the back of the awning for traveling.

Maintenance

- 1) Periodically check the brackets, nuts and bolts and ensure they are tightened by hand.
- 2) Ensure the telescopic poles are fitted correctly and stowed away after every use.
- 3) Clean the weather shade with clean water (do not use a high-pressure washer or chemicals)
- 4) Contact your closest dealer if there are any support needed.