



Caution:

The Mover contains 2 Neodymium magnets with a holding power of 2.7 kg. (26.5N)

Keep safely away from magnetic strips of credit cards, pacemakers, etc.

We recommend at least 60 mm.

Be sure to follow these safety precautions.

User Manual:

Model: Easy Kid's is used for skis up to 1.4 meters

Use: The Mover is designed to roll skis on walkways, roads, etc. To avoid damage to skis or the Mover, lift skis up when walking across transitions such from the road to a side walk.

It is not permitted to keep the Mover attached to the skis when transporting them on a roof rack.

For installation see pictures:

Beware: Ski 1 right hand, then push the second ski into the stopper of the binding. Attach the Mover to ski 1. Then attach the included elastic band according to pictures. Pull the elastic cord up to the binding, then stretch across the binding. Be sure not to cross the elastic cord.

The included hook and loop fasteners are used to attach the ski poles to the skis, convenient for longer transports.

After use, rinse the Mover with lukewarm water, disassemble, lay out to dry completely, then store in the provided storage bag.

From time to time, add a drop of lubricating oil between the axle and wheel.

Disposal:

You may send the Mover back to us. We will disassemble it and safely dispose of and/or recycle all components.

