

# FITMENT INSTRUCTIONS

## ROOF TOP TENTS

### TOOLS REQUIRED:


- 13 mm Spanner

*\*Please note that if you mount the RTT on a SUV, you need to mount it on 3 load bars.*

### TO FIT

*Please use the images as a reference to help you fit the Awning to load bar brackets.*


1. Open the RTT Box and unwrap the tent carefully, do not cut the RTT whilst you unwrap it.
2. Unclip the latches and open the tent.
3. Ensure that the list below is in the tent, remove them, and put them aside.
  - (2) Two x RTT mount bracket packages with (2) two per package
  - (1) One x Ladder bracket package
  - (1) One x Telescopic Ladder
  - (1) One x Shoe Bag
4. Once the packages are removed, place the tent on stillages

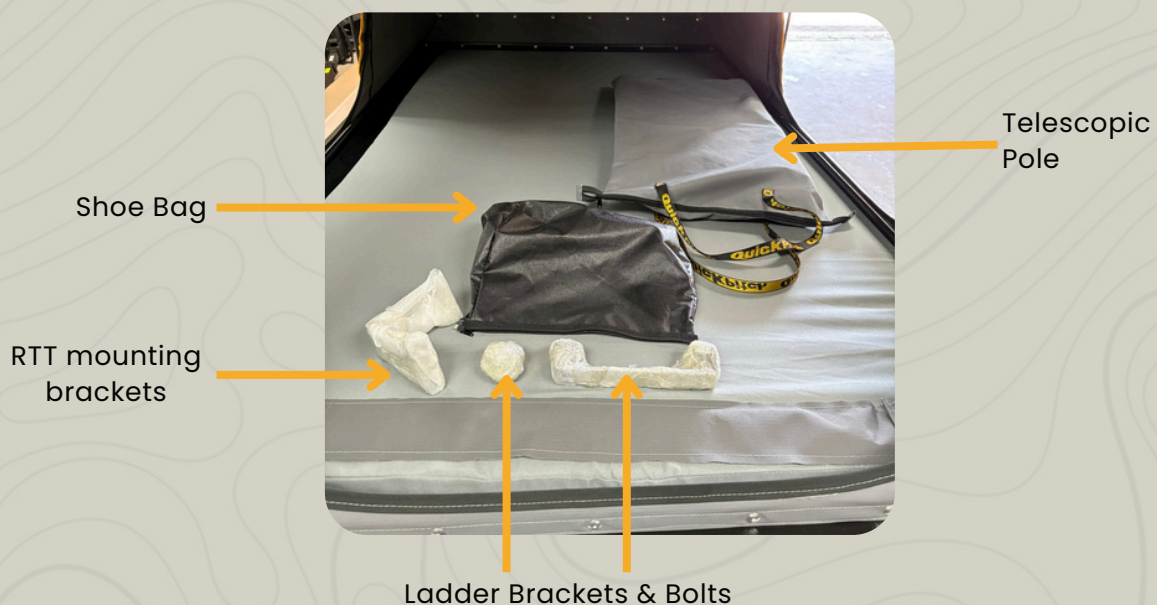

**5.** Open the ladder bracket packages and slide (2) two cup square bolts into the accessory rail on the side of the tent. Insert the ladder bracket onto the bolts and tighten.

**6.** Open the (2) Two RTT Mount Bracket packages and slide (2) two cup square bolts into the accessory rail on the side of the tent. Then, take (8) eight hex bolts and slide (4) four in the mounting rail underneath on either side of the tent. Insert the bracket onto the bolt and loosely tighten.

**Step 5**

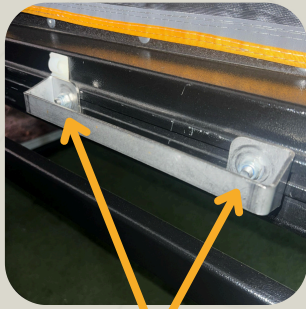

Cup Square Bolts

**Step 6**



Cup  
Square  
Bolts

Hex Bolt

**7.** Measure the mounting surfaces and move the tent mount brackets on the tent to the measured length.

**8.** Hoist the tent onto the mounting surface and fasten all the bolts.

**9.** Take extra precaution and ensure that all the bolts and brackets are fastened and secured.



PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.  
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.