



## - 2 Door Jimny Roof Console - Fitting Instruction Manual



### ⚠ WARNING! ⚠


IT IS CRITICAL THAT OUR PRODUCTS BE PROPERLY AND SECURELY INSTALLED. NOT DOING SO COULD LEAD TO AUTOMOBILE ACCIDENT, AND COULD RESULT IN SERIOUS INJURY OR DEATH. YOU TAKE FULL RESPONSIBILITY TO MAKE SURE OUR PRODUCTS ARE ASSEMBLED AND SECURED CORRECTLY TO YOUR VEHICLE. IF YOU DO NOT HAVE EXPERIENCE IN SUCH A JOB, YOU SHOULD HAVE THE PRODUCTS INSTALLED BY A PROFESSIONAL OR QUALIFIED PERSONNEL. WE WILL NOT BE RESPONSIBLE FOR ANY DAMAGE CAUSED.



## FITTING INSTRUCTIONS

# 1.1 ORGANISE

FIGURE 1.1

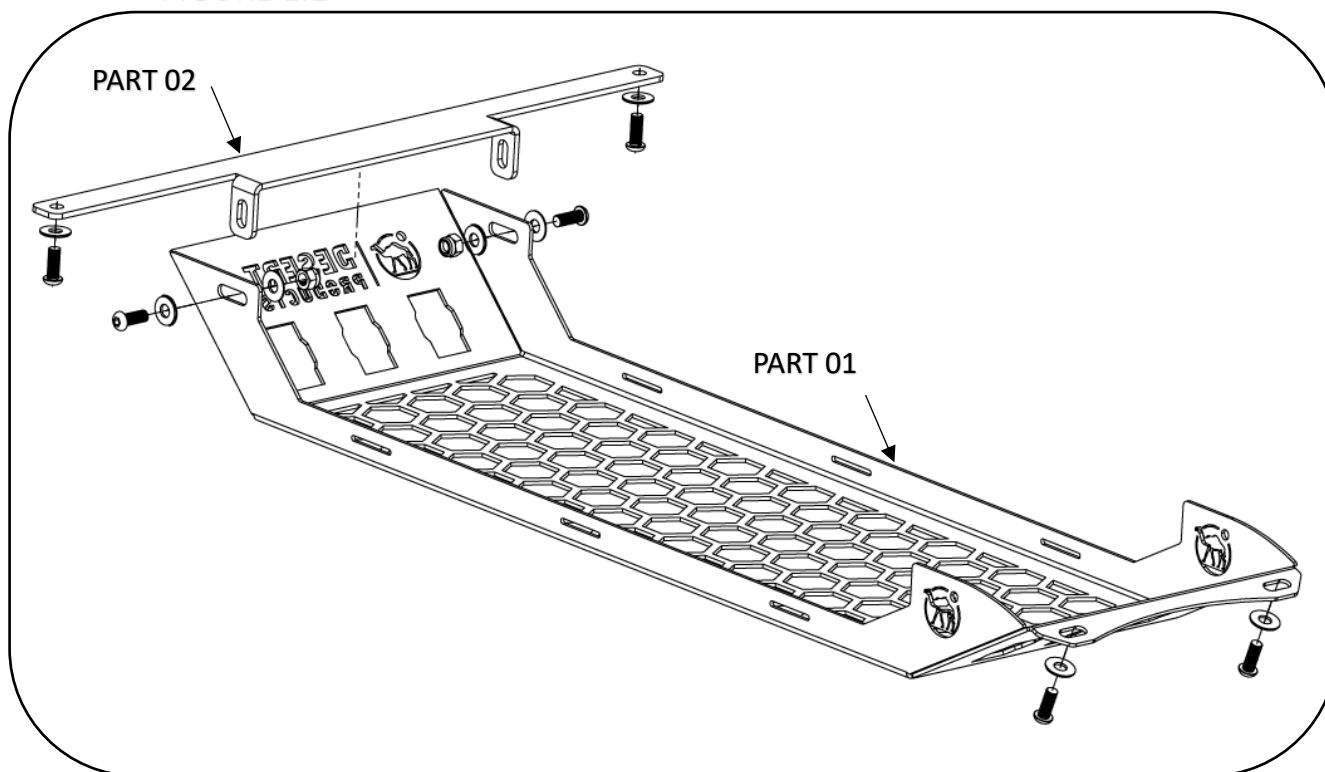

PARTS		
1	Part01	X 1
2	Part02	X 1
3	M6 Button Head	X 6
4	M6 Washer	X 8
5	M6 Lock Nut	X 2

TOOLS NEEDED	
A	ALLEN KEY SET
B	WRENCH SET
C	SPANNER SET
D	FLAT SCREW DRIVER





## 2. PREPARE

FIGURE 2.1



### STEP 1

Firstly, remove the front interior light by simply pulling the unit down.  
Use Figure 2.1 as reference.

FIGURE 2.2




### STEP 2

Run your finger along the edge of the interior light cutout and find two holes in the metal, you can use "Part 01" as a guide, then pierce the holes by using a screw driver.

Use Figure 2.2 as reference.

FIGURE 2.3

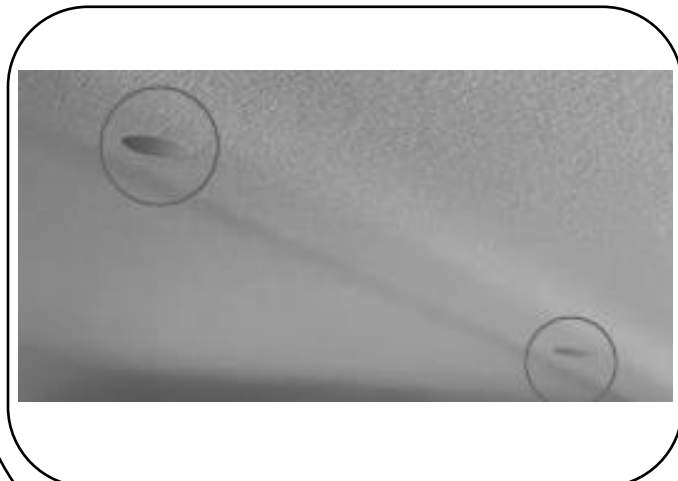

### STEP 3


Remove factory plugs from roof (circled in image) then...

Fit rear bracket to roof lining where factory plugs previously were placed.




## 2. FIT & SECURE

FIGURE 2.4

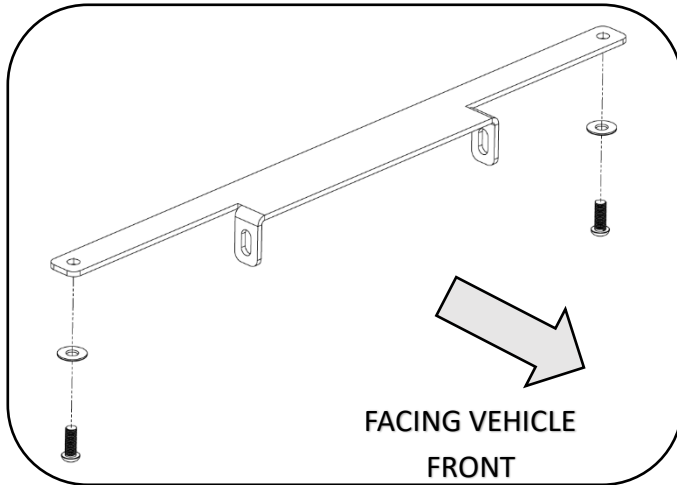**STEP 3**

Guide sketch to fit rear bracket to roof lining where factory plugs previously were placed.

FIGURE 2.5

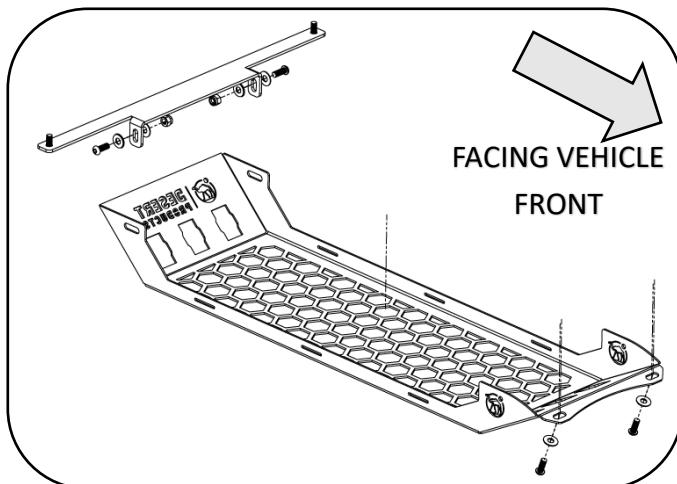**STEP 5**

Fit "Part 01" to "Part 02" (fitted in previous step) and fit FRONT to the Vehicle's ROOF as prepared in "STEP 2".

See fig 2.5 as reference.



## GALLERY



## SPECIFICATIONS

DETAILS		
1	2D Jimny ROOF CONSOLE ( Size )	520mm x 345mm x 210mm
2	2D Jimny ROOF CONSOLE ( Part Number )	DES/JIMNY/RC
3	2D Jimny ROOF CONSOLE ( Weight )	2 kg
4	MAXIMUM WEIGHT TO CARRY	2 kg



Congratulations! All done. Enjoy your work!

