



FITMENT INSTRUCTIONS

QUICK-EN-SUITE BOX


TOOLS REQUIRED:

- 13 Spanner
- Chamfer Tool
- Drill
- 4 x M8 Bolt and Lock Nut

TO FIT

Please use the images with the steps as a reference to help you with the fitment.

1. Open the Quick-en-Suite Box and unwrap the shower carefully to ensure there are no cuts while unwrapping the bag.
2. Remove the (4) four grommets from the back of the shower box to open the (4) four mounting holes.

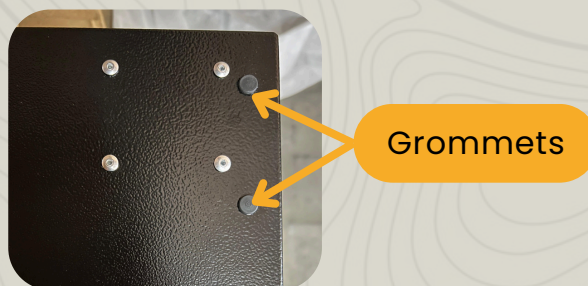

3. **Insert** 4 x M8 bolts into the mounting holes of the shower box. Thereafter, insert these bolts into the mounting surface or brackets on the vehicle.



4. When all the bolts are inserted, tighten them on the mounting surface, using a 13mm spanner.

Enjoy your en suite privacy.



PLEASE DONT HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.