



# FITMENT INSTRUCTIONS

## ROOF TOP TENT: AERO LIGHTWEIGHT TENT


### TOOLS REQUIRED:

- 13mm Spanner
- Bolts and Nuts are supplied with brackets
- Measuring Tape

### TO FIT

*Please use the images with the steps as a reference to help you with the fitment.*

1. Open the Aero Box, carefully unwrap, so that you do not cut the aluminium of the Aero.
2. Unclip the latches and open the Aero, make sure the below is included in your tent, and remove them from the tent:
  - 1 x Low Mount bracket packages 4 (four) per package
  - 1 x (one) Ladder bracket package
  - 1 x (one) Telescopic ladder
3. Place the tent on stillages
4. Open the ladder bracket packages and use the 2 x M8 Hex bolts on the ladder bracket. Slide the head of the bolt into the load bar side slot underneath the tent to fit.
5. When the ladder bracket is in your desired place tighten the bolts using a 13mm spanner, so the bracket is secured.

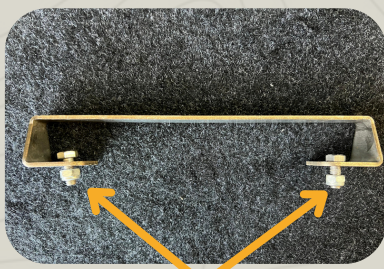

Hex bolts



Accessory rail slots



Ladder bracket fitted

**6.** Open the (1) one Low Mount Bracket package and slide (4) four M8 Hex bolts into the Load Bar slot on both sides of the tent. Insert the bracket onto the bolts and loosely tighten them (by hand).



Low Mount Bracket



Hex Bolt in Load Bar slot

---

**7.** Measure the mounting surface with a measuring tape. Use the measurement to correctly space the low mount brackets on the tent.

**8.** Hoist the tent onto the mounting surface and guide the bolts into their position. Fasten all the bolts using a 13mm spanner when the Aero is in place.

**9.** Double-check to ensure that all the bolts and brackets are fastened and secured.

**10.** Enjoy the Aero Lightweight slimline design tent.



PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.  
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.