

# FITMENT INSTRUCTIONS

## QUICK-EN-SUITE TO LOAD BAR

### TOOLS REQUIRED:

- 13mm Spanner
- M8 Hex Head

### TO FIT

*Please use the images with the steps as a reference to help you with the fitment.*


1. Carefully **open** the Quick-en-Suite to Load Bar brackets. Make sure not to cut the brackets while unwrapping.
2. Using the M8 hex head bolts provided with the brackets, slide them into the side rail of the load bar. (Grind them slightly if the bolts don't fit to ensure a proper fit.)



3. Once the brackets are in place, slide them as far back as possible against the edge of the load bar and tighten.

4. Ensure that the distance between the bracket mounting holes and the shower mounting holes matches.

5. Mount the shower onto the brackets and tighten.

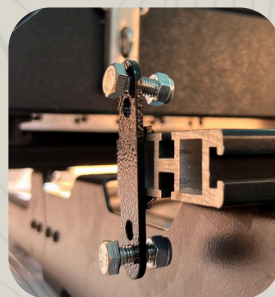

3. Bracket  
against load bar



3. Tighten  
bracket



5. Mount  
shower

PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.  
THANK YOU FOR YOUR SUPPORT. WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.